



1. Enter Program Mode

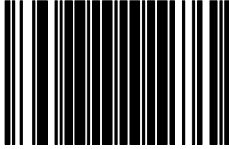


999999

8. Enable LF

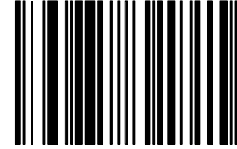

116612

2. Internal Low Speed USB Defaults

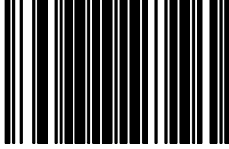


999941

9. Configuration Code 1




803440

3. Redundancy 5 digit supps

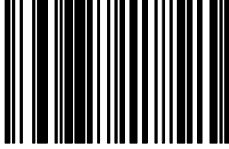


101211

10. Configuration Code 2

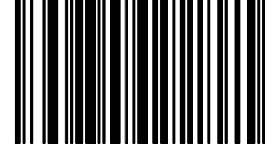

80812100

4. Redundancy 2 digit supps

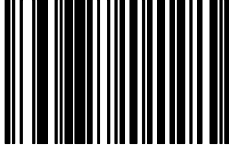


101212

11. Configuration Code 3




8082240

5. Enable 5 digit supps

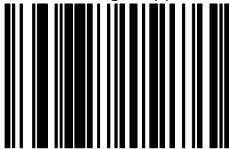


101216

12. Configuration Code 4

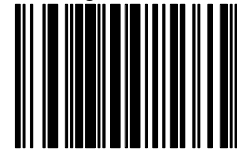


808320

6. Enable 2 digit supps

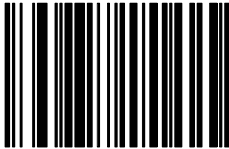


101217

13. Configuration Code 5

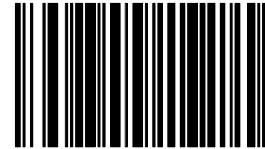


80841290

7. Enable 977 supps

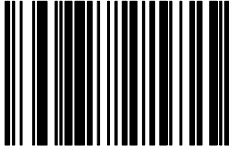


101314

14. Configuration Code 6

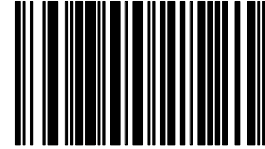

80851320

15. Exit Program Mode

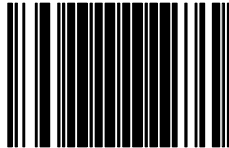

999999

